
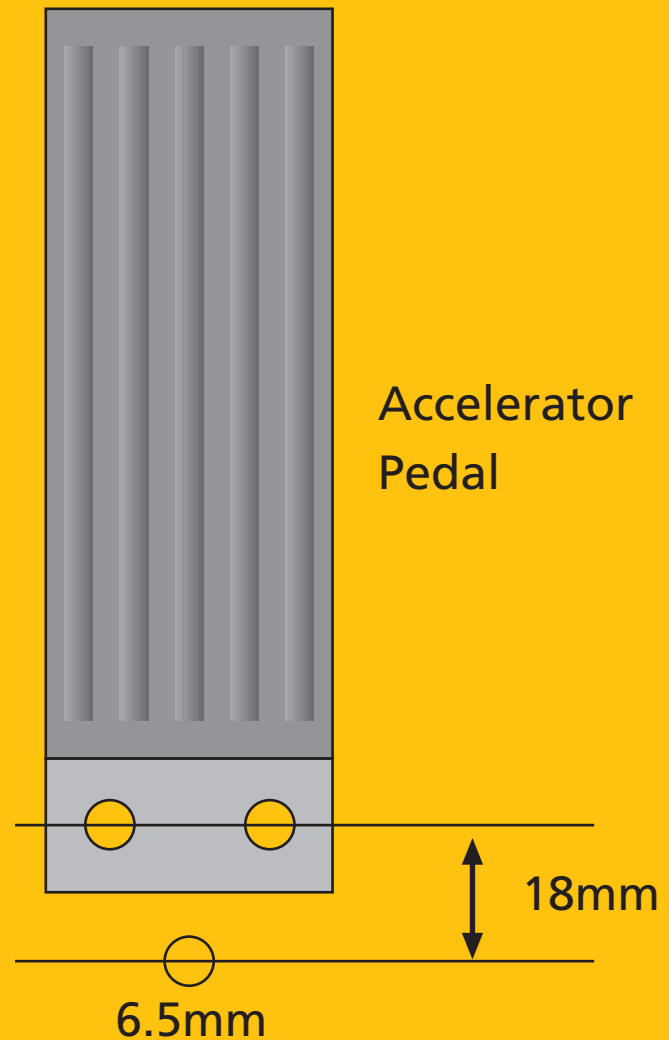


Instructions for installing Vanagon/TDI Accelerator Pedal Conversion from [HA Projekt](#):

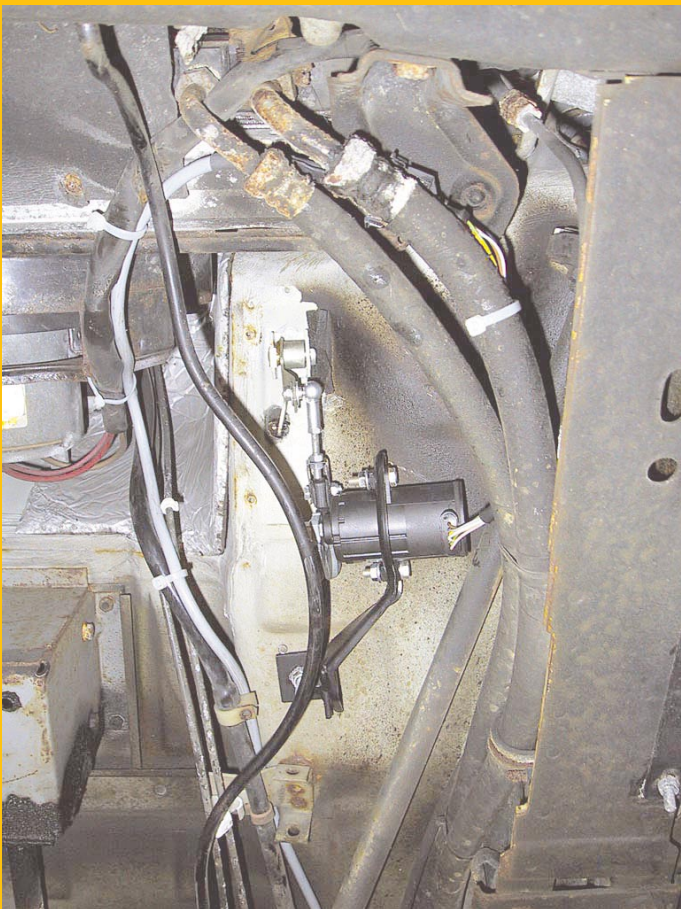

- After installation check both stops of the potentiometer.
- Operation of the accelerator pedal should be limited at both ends by the potentiometer's stops.
- If that's not the case, adjust the linkage by lengthening or shortening it appropriately.
- When floored the accelerator pedal should rest on the metal rather than just on the potentiometer stop.